
25VQ(H)\*\*\*\*-\*\* \*-30(L)

## Vane Type Single Pumps

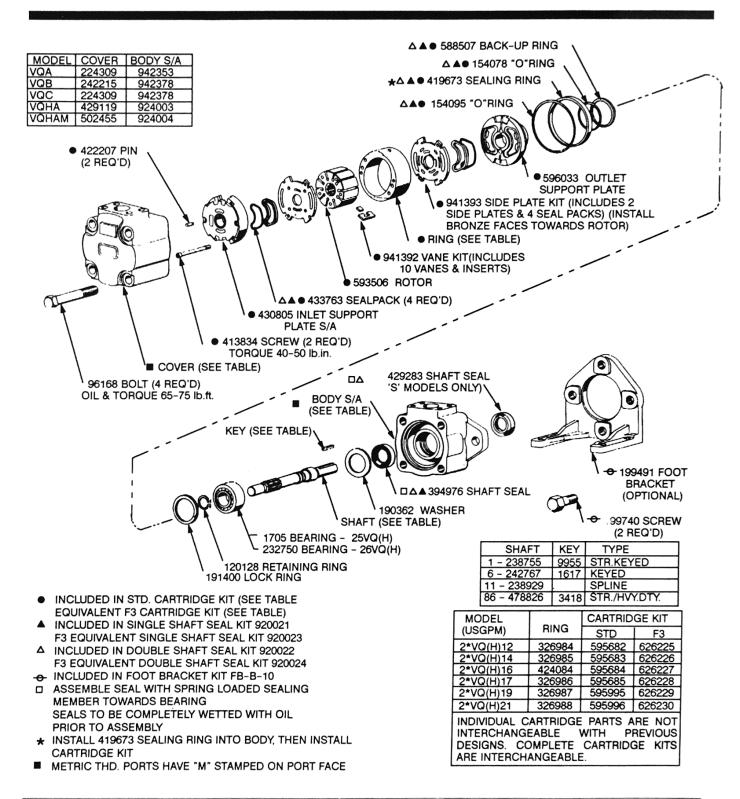



## MODEL CODE BREAKDOWN

(F3) 25 VQ (H) 12 A (M) F \* A 30 L 1 2 3 4 5 6 7 8 9 10 11 12

1 Special Seals

For mineral oil & fire resistant fluids.

2 Series

25VQ Pump 26VQ Pump

3 Vane Pump

(Intra-Vane Flex Plate Type)

4 Operating Pressure

H - High Pressure (3000 - 3500 PSI) Omit - Rated Pressure (3000 PSI)

5 US GPM Capacity

( SAE RATING 1200 RPM-100 PSI) 12,14,16,17,19,21

6 SAE Port Connections

 Code
 Inlet
 Outlet

 A 4-Bolt Fig.
 4-Bolt Fig.

 B Str. Thd.
 Str. Thd.

 C 4-Bolt Fig.
 Str. Thd.

7 Metric Port Connections
M - Metric Thd.

Omit - SAE Thd.

8 Mounting

F - Foot (Single Shaft Seal) S - Flange (Double Shaft Seal)

Omit - Flange (Single Shaft Seal)

9 Shaft Type

1 - Str. Key 11 - Splined 6 - Str. Key

86 - Str. Key

10 Outlet Positions

(Viewed from cover end of pump)

A - Outlet - Opposite Inlet

B - Outlet - 90° CCW from Inlet

C - Outlet - Inline with Inlet


D - Outlet - 90° CW from Inlet

11 Design

12 Shaft Rotation

(Viewed from shaft end)

L - Left Hand (CCW Rotation)
Omit - Right Hand (CW Rotation)

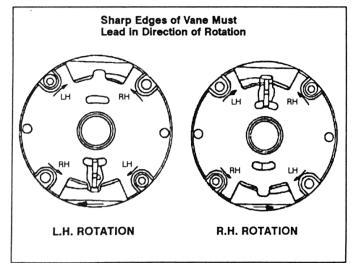

## NOTE

To reverse cartridge kit rotation, remove the two screws and reverse the location of the inlet support plate and outlet support plate. Re-install the two screws hand tight. Use pump cover to align all sections of the cartridge. Carefully remove the cover and tighten the screws to recommended torque value.

When ordering spare cartridge parts, it is recommended they be obtained in cartridge kits. Kits are assembled and tested by Vickers for either right or left hand rotation. If left hand rotation is required, it should be specified on parts order by adding suffix "L" to cartridge kit number.