



## Service Parts Information

## HIGH TORQUE LOW SPEED VANE MOTORS

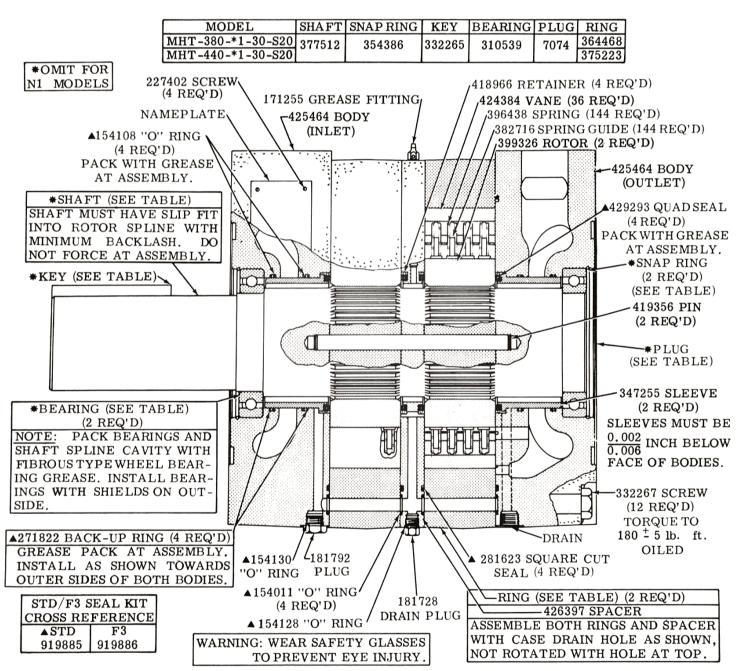

CAUTION: WHEN ASSEMBLING CARTRIDGE, INSERT VANES IN ROTOR SLOTS AT THE MINOR DIA-METER OF CAM RING. ROTATE CARTRIDGE ONE COMPLETE REVOLUTION PRIOR TO ASSEMBLY WITH BODIES. THIS PREVENTS MISALIGNMENT OF SPRINGS AND GUIDES. MAKE SURE THE MARK-ED ROTOR TOOTH OF EACH CARTRIDGE IS IN LINE BEFORE INSTALLATION OF SHAFT.

## **MODEL CODE BREAKDOWN**

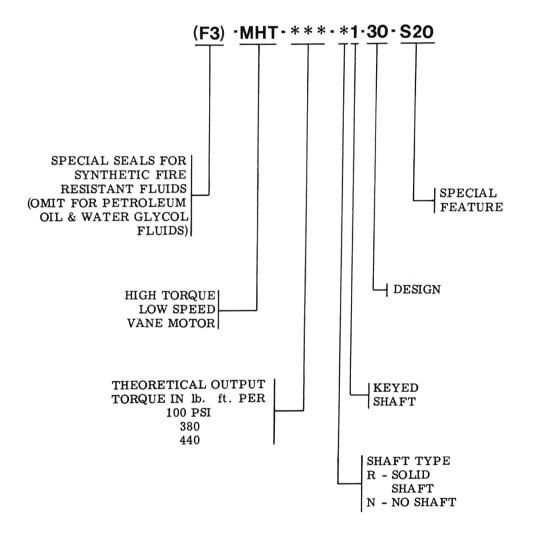

To insure sustained efficiency and maximum trouble-free life of this precision equipment, initial and continuous filtration of the fluid medium to 25 microns absolute or less is essential. (For information pertaining to Sperry Vickers economical 3 or 10 micron filters, see installation drawing 522140.)